

enerio®

CP-122601



Citrus Juicer (EN)

Citruspress (SE)

CE

Content – Innehåll

Instruction manual – English - 2 -

Bruksanvisning – Swedish - 7 -

SAFETY INSTRUCTIONS

Before use make sure to read all of the below instructions in order to avoid injury or damage, and to get the best results from the appliance. Make sure to keep this manual in a safe place. If you give or transfer this appliance to someone else make sure to also include this manual.

In case of damage caused by user failing to follow the instructions in this manual the warranty will be void. The manufacturer/importer accepts no liability for damages caused by failure to follow the manual, a negligent use or use not in accordance with the requirements of this manual.

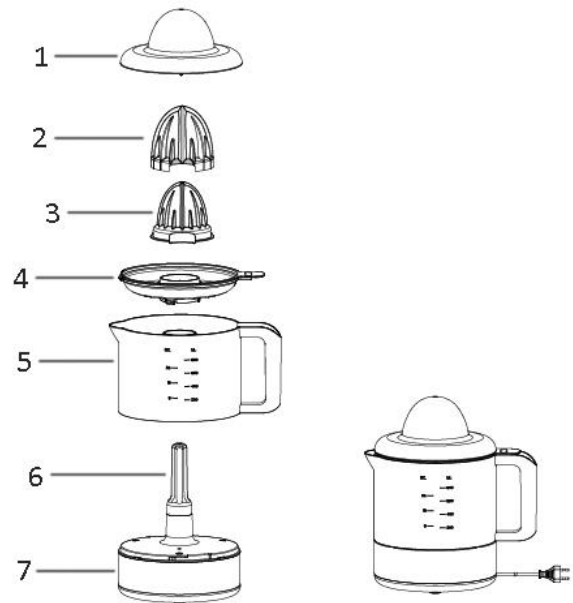
1. Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
2. This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
3. Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised.
4. Keep the appliance and its cord out of reach of children aged less than 8 years.
5. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
6. Children shall not play with the appliance.

7. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
8. There is a potential risk of injuries from misuse.
9. Regarding the instructions for cleaning the surfaces which come in contact with food, please refer to the paragraph "CLEANING AND MAINTENANCE" of the manual.
10. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
11. Warning: Potential risk of injuries from misuse.
12. Before inserting the plug into the mains socket, please check that the voltage and frequency comply with the specifications on the rating label.
13. If an extension cord is used it must be suited to the power consumption of the appliance, otherwise overheating of the extension cord and/or plug may occur. There is a potential risk of injuries from tripping over the extension cord. Be careful to avoid dangerous situations.
14. Disconnect the mains plug from the socket when the appliance is not in use and before cleaning.
15. Ensure that the mains cable is not hung over sharp edges and keep it away from hot objects and open flames.
16. Do not immerse the appliance or the mains plug in water or other liquids. There is danger to life due to electric shock!
17. To remove the plug from the plug socket, pull the plug. Do not pull the power cord.
18. Do not touch the appliance if it falls into water. Remove the plug from its socket and send it to an authorized service center for repair.
19. Do not plug or unplug the appliance from the

- electrical outlet with a wet hand.
20. Never attempt to open the housing of the appliance, or to repair the appliance yourself. This could cause electric shock.
 21. Never leave the appliance unattended during use.
 22. This appliance is not designed for commercial use.
 23. Do not use the appliance for other than intended use.
 24. This appliance can only be used to squeeze the citrus fruit. Never use it to juicing other kinds of fruit.
 25. Do not wind the cord around the appliance and do not bend it.
 26. The use of accessory attachment not recommended by the appliance manufacturer may cause injuries.
 27. Place the appliance on a stable, level surface and not close to hot objects or open flames (e.g. hotplates).
 28. Close supervision is necessary for any appliance being used by or near children.
 29. It is necessary to keep this appliance clean because it is in direct contact with food.
 30. Unplug from outlet while not in use and let the appliance cool down, before putting on or taking off parts, and before cleaning. Never use the appliance outside and always place it in a dry environment.
 31. Never use accessories, which are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.
 32. Avoid contact with moving parts. Keep hands, clothing, as well as spatulas and other utensils away from moving parts during operation to reduce the risk of injury to persons, and/or damage to the appliance.
 33. Regarding the instructions for operating time, please refer to the below paragraph of the manual.

HOUSEHOLD USE ONLY**PARTS DESCRIPTION**

1. Lid
2. Big extractor cone
3. Small extractor cone
4. Filter tray
5. Juice jug
6. Rotating shaft
7. Motor base

**PREPARING THE APPLIANCE FOR USE**

1. Clean the lid, extractor cones, filter tray and juice jug thoroughly before the first use. Check the section "CLEANING AND MAINTENANCE".
2. Assemble the appliance by the following order. See the line drawing in "PARTS DESCRIPTION" for reference.
 - 1) Put the juice jug above the motor base by passing the rotating shaft through the center. Align the bulge and groove; turn the juice jug clockwise to fix it upon the motor base.
 - 2) Place the filter tray above the juice jug. The handle of the filter tray should stay above the jug handle, and the rotating shaft should pass through the center of the filter tray.
 - 3) Place the extractor cone(s) above the filter tray, and let the rotating shaft insert into the center of the small extractor cone. Decide to use small or big extractor cone depending on the size of citrus fruit. The big extractor cone should cover the small extractor cone for use.
3. Put the appliance on a firm and level surface out of reach for children.

HOW TO USE THE APPLIANCE

1. Put the plug into an appropriate power outlet.
2. Halve the citrus fruit, put the halved fruit upon the extractor cone, press it lightly and the motor starts running. The extracted juice will flop into the jug through the filter tray, and the rough flesh will remain on the filter tray. The motor may rotate in different directions.
3. Release the hand from the extractor cone, the motor stops running.

Caution:

- Never use excessive force when pressing the fruit to prevent the motor from being blocked and damaged.
 - Make the appliance work for 15 seconds and rest for 15 seconds. This is one cycle. After 10 consecutive cycles, the appliance must rest for 30 minutes.
 - The max capacity of the juice jug is 800 ml. Do not overfill the juice jug.
4. When the juice squeezing is finished: if you don't pour out the juice at once, place the lid on the top; if you need to pour out the juice, just remove the extractor cone(s) and the filter tray, rotate the juice jug anti-clockwise to release it from the motor base.
 5. After use, take out the plug from the power outlet.

Caution: When the appliance is not in use, never hold the two pins of the plug while turning the rotating shaft as this may result in electric shock.

CLEANING AND MAINTENANCE

1. Unplug the appliance and allow the appliance to cool off before cleaning.
2. Clean the extractor cone(s), filter tray, juice jug and lid in warm soapy water. Rinse and dry them thoroughly before use. These parts are also dishwasher-safe.
3. Wipe the motor base with a soft moist cloth, and then dry it with a soft dry cloth. Never immerse the motor base in water nor rinse it under the tap.
4. Assemble all the parts.

TECHNICAL DATA

Operating voltage: 220-240V ~ 50Hz

Power consumption: 30W

GUARANTEE AND CUSTOMER SERVICE

Before delivery our devices are subjected to rigorous quality control. If, despite all care, damage has occurred during production or transportation, please return the device to your dealer. In addition to statutory legal rights, the purchaser has an option to claim under the terms of the following guarantee:

For the purchased device we provide 2 years guarantee, commencing from the day of sale. If you have a defective product, you can directly go back to the point of purchase.

Defects which arise due to improper handling of the device and malfunctions due to interventions and repairs by third parties or the fitting of non-original parts are not covered by this guarantee. Always keep your receipt, without the receipt you can't claim any form of warranty. Damage caused by not following the instruction manual, will lead to a void of warranty, if this results in consequential damages then we will not be liable. Neither can we hold responsible for material damage or personal injury caused by improper use if the instruction manual are not properly executed. Damage to accessories does not mean free replacement of the whole appliance. In such case please contact our service department. Broken glass or breakage of plastic parts is always subject to a charge. Defects to consumables or parts subjected to wearing, as well as cleaning, maintenance or the replacement of said parts are not covered by the warranty and are to be paid.

ENVIRONMENT FRIENDLY DISPOSAL



Recycling – European Directive 2012/19/EU

This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle

it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

SÄKERHETSANVISNINGAR

Före användning och för att att erhålla bästa resultat från apparaten, var noga med att läsa igenom alla instruktioner nedan för att undvika skada på person eller egendom. Se till att förvara denna bruksanvisning på en säker plats. Om du ger bort eller överlåter denna apparat till någon, se till att även inkludera denna bruksanvisning.

Vid skador som orsakats av att användaren inte följer instruktionerna i denna bruksanvisning ogiltighetsförklaras garantin. Tillverkaren/importören tar inget ansvar för skador som orsakats av underlåtenhet att följa bruksanvisningen, vid en vårdslös användning eller användning som inte är i enlighet med kraven i denna bruksanvisning.

1. Koppla alltid ur apparaten från strömförsörjningen innan den lämnas obebakad och före montering, isärtagning eller rengöring.
2. Denna apparat kan användas av barn från 8 år och uppåt under förutsättning att de övervakas eller mottagit instruktioner för säker användning av apparaten och förstår riskerna.
3. Rengöring och underhåll får inte utföras av barn såvida de inte är 8 år och uppåt och under tillsyn.
4. Håll apparaten och dess strömkabel utom räckhåll för barn under 8 år.
5. Apparaterna kan användas av personer med nedsatt fysisk, sensorisk eller mental förmåga eller av personer som saknar erfarenhet och kunskap under förutsättning att de övervakas eller mottagit instruktioner för säker användning av apparaten och förstår riskerna.

6. Barn får inte leka med apparaten.
7. Stäng av apparaten och dra ut strömkontakten från eluttaget innan tillbehör byts ut och innan du närmar dig delar som är rörliga under användning.
8. Det finns en potentiell risk för personskador vid felaktig användning.
9. Se avsnittet " RENGÖRING OCH UNDERHÅLL " i bruksanvisningen för instruktioner om hur man rengör ytor som kommit i kontakt med mat.
10. Om strömkabeln är skadad måste den bytas ut av tillverkaren, dess servicerepresentant eller liknande kvalificerad person för att undvika fara.
11. Varning: Potentiell risk för skador vid missbruk.
12. Innan du ansluter strömkontakten till eluttaget, kontrollera att spänningen och frekvensen överensstämmer med specifikationerna på märkplåten.
13. Om en förlängningskabel används måste den vara lämplig för apparatens strömförbrukning, annars kan överhettning av förlängningsskabeln och/eller strömkontakten inträffa. Det finns en eventuell risk för personskador om man snubblar över förlängningskabeln. Var noga med att undvika att skapa farliga situationer.
14. Dra ut strömkontakten från eluttaget när apparaten inte används och före rengöring.
15. Säkerställ att strömkabeln inte hänger över någon skarp kant och håll den borta från varma föremål och öppen eld.
16. Sänk inte ner apparaten eller strömkontakten i vatten eller någon annan vätska. Det är livsfarligt på grund av elektriska stötar!
17. För att dra ut strömkontakten från eluttaget, dra ut den via strömkontakten. Dra inte i strömkabeln.
18. Rör inte apparaten om den faller ned i vatten. Koppla

ur strömkontakten från dess uttag och lämna in den hos ett auktoriserat servicecenter för reparation.

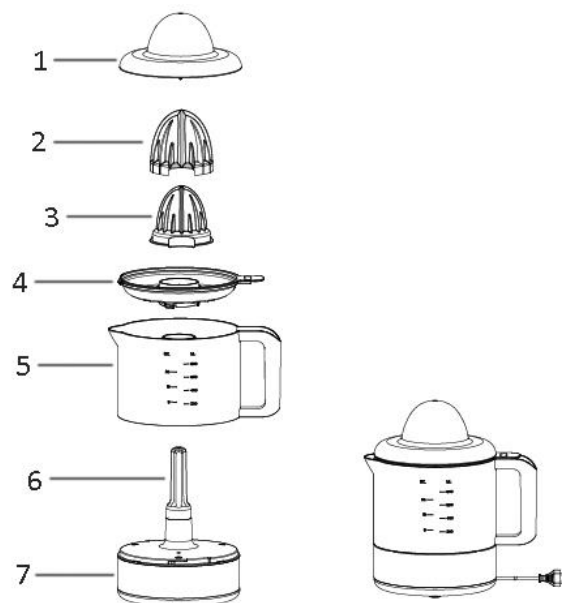
19. Du får inte koppla in eller dra ut apparaten från eluttaget med blöta händer.
20. Försök aldrig att öppna apparatens hölje eller reparera den själv. Det kan orsaka elektriska stötar.
21. Lämna aldrig apparaten obevakad vid användning.
22. Denna apparat är inte utvecklad för kommersiell användning.
23. Använd inte apparaten för något annat ändamål än den är avsedd för.
24. Den här hushållsapparaten kan bara användas för citrus frukter. Använd den aldrig till andra typer av frukt.
25. Linda inte kabeln runt apparaten och undvik att böja den.
26. Användning av tillbehör som inte rekommenderas av apparatens tillverkare kan orsaka personskador.
27. Placera apparaten på en stabil, jämn yta och inte i närheten av varma föremål eller öppen eld (t.ex. värmeplattor).
28. Noggrann övervakning är nödvändig för alla apparater som används av eller i närheten av barn.
29. Det är nödvändigt att hålla denna apparat ren eftersom den är i direkt kontakt med mat.
30. Dra ut strömkontakten från eluttaget när apparaten inte används och låt den svalna innan du monterar eller tar bort delar, samt före rengöring. Använd aldrig apparaten utomhus och placera den alltid på en torr plats.
31. Använd aldrig tillbehör som inte rekommenderas av tillverkaren. De kan utgöra en risk för användaren och eventuellt skada apparaten.
32. Undvik kontakt med de rörliga delarna. Håll händer, kläder samt spatlar och andra köksredskap borta från

de rörliga delarna vid användning för att minska risken för skada på person och/eller apparaten.

33. Se nedanstående paragraf i bruksanvisningen för information för drifttid.

ENDAST FÖR HUSHÅLLSBRUK**BESKRIVNING AV DELARNA**

1. Lock
2. Stor presskon
3. Liten presskon
4. Filterbricka
5. Juicekanna
6. Rotationsaxel
7. Motorbas

**FÖRBEREDA APPARATEN FÖR ANVÄNDNING**

1. Rengör locket, presskonerna, filterbrickan och juicekannen noga innan första användning. Se sektionen "RENGÖRING OCH UNDERHÅLL".
2. Montera apparaten i följande ordning. Se ritningen i "BESKRIVNING AV DELARNA" för referens.
 - 1) Placera juicekannen ovanpå motorbasen genom att föra igenom rotationsaxeln genom centrum. Rikta in utbuktningen mot spåren, vrid juicekannen medurs för att fästa den på motorbasen.
 - 2) Placera filterbrickan ovanpå juicekannen. Handtaget på filterbrickan skall vara ovanför kannans handtag och rotationsaxeln skall passera genom centrum på filterbrickan.
 - 3) Placera presskon(en/erna) ovanpå filterbrickan och låt rotationsaxeln införas i centrum på den lilla presskonen. Bestäm om den lilla eller stora presskonen skall användas beroenden på storleken på citrusfrukten. Den stora presskonen skall täcka den lilla presskonen vid användning.
3. Placera apparaten på en fast och plan yta utom räckhåll för barn.

HUR APPARATEN ANVÄNDS

1. Anslut kontakten till ett lämpligt eluttag.
2. Halvera citrusfrukten, placera den halverade frukten ovanpå presskonen, tryck lätt och motorn börjar arbeta. Den pressade juicen kommer att rinna ned i kannan genom filterbrickan och fruktköttet kommer att fastna på filterbrickan. Motorn kan rotera i olika riktningar.
3. Ta bort handen från presskonen och motorn stannar.

Varning:

- Använd aldrig överdriven kraft när frukten trycks ned för att förhindra att motorn blockeras och skadas.
 - Låt apparaten arbeta i 15 sekunder och vila i 15 sekunder. Detta är en användningscykel. Efter 10 cykler i följd måste apparaten vila i 30 minuter.
 - Maximal kapacitet i kannan är 800 ml. Överfyll inte juicekannen.
4. När juicepressningen är klar, om du inte håller ut juicen direkt, sätt på locket, om du behöver hålla ut juicen ta bara bort presskon(en/erna) och filterbrickan, vrid juicekannen moturs för att lossa den från motorbasen.
 5. Efter användning, dra ur kontakten från eluttaget.

Varning: När apparaten inte används, håll aldrig i de två stiftarna på kontakten medan axeln vrids då detta kan resultera i elektriska stötar.

RENGÖRING OCH UNDERHÅLL

1. Koppla ifrån apparaten och låt apparaten svalna innan rengöring.
2. Rengör presskon(en/erna), filterbrickan, juicekannan och locket i varmt vatten med diskmedel. Skölj och torka dem ordentligt innan de sätts tillbaka. Dessa delar är också diskmaskinssäkra.
3. Torka av motorbasen med en mjuk fuktad trasa och torka sedan den torr med en torr trasa. Sänk aldrig ned motorbasen i vatten eller skölj den under kranen.
4. Montera alla delar.

TEKNISKA DATA

Driftsspänning: 220-240V ~ 50Hz

Strömförbrukning: 30W

GARANTI OCH KUNDTJÄNST

Innan leverans genomgår våra apparater en sträng kvalitetskontroll. Om det trots detta skulle uppstå någon skada på produktionen eller vid transporten, ber vi dig att ta med apparaten tillbaka till inköpsstället. Förutom de i lag fastställda garantianspråken har köparen möjlighet att göra gällande följande anspråk på garanti:

För den köpta apparaten ges 2 års garanti, med början på inköpsdagen.

Brister som uppstår genom felaktig hantering av apparaten och fel som uppstår genom ingrepp och reparationer av tredje man eller montering av främmande delar, omfattas ej av vår garanti. Behåll alltid ditt kvitto då det är din garanti vid eventuell reklamation. Skador som uppstår p.g.a. att instruktionsmanualen inte följs ogiltigförklarar garantin och om detta leder till påföljande skador så kan inte vi hållas ansvariga. Vi kan inte hållas ansvariga för materiella skador eller personskador som orsakas av felaktig användning eller om inte säkerhetsföreskrifterna följs. Skador på tillbehören innebär inte per automatik ersättning av hela apparaten. I sådana fall ska du kontakta vår kundservice. Trasigt glas och trasiga plastdelar innebär alltid en kostnad. Defekter på förbrukningsartiklar eller slitdelar och även skador orsakade av rengöring, underhåll eller byte av tidigare nämnda delar täcks inte av garantin och ska således betalas av ägaren.

MILJÖVÄNLIG KASSERING



Återvinning - EU-direktiv 2012/19/EU

Denna markering indikerar att produkten inte får kastas tillsammans med övrigt hushållsavfall. För att förhindra eventuell skada på miljön eller människors hälsa på grund av okontrollerad avfallshantering,

återvinns de på ett ansvarsfullt sätt som främjar en hållbar återanvändning av materiella resurser. För att återlämna den använda enheten, använd retur- och insamlingssystem eller kontakta återförsäljaren där produkten var köpt. De kan ta denna produkt för miljösäker återvinning.